Assembly and use

p-marc Beach Tennis Tie-Break Scoreboard

Block A explains the complete assembly with the clamp for standard posts. Block B shows the specific fastening method for larger posts.

If you selected both clamps, use the method for the type of post where you will install the tie-break scoreboard.

A · Clamp for standard posts

Complete assembly from the clamp to the installed tie-break scoreboard.

B · Clamp for larger posts

Strap fastening and fitting the tie-break scoreboard.

C · FITTING THE REAR SUPPORTS

Find the rear slots and fit both supports.

> **IMPORTANT**
>
> Always tighten the screws by hand and do not force them.

Approximate diameters

The clamp for larger posts is designed for posts approximately 6 to 14 cm in diameter. For larger diameters, contact p-marc: a longer hook-and-loop strap can be adapted to the post.

Assembly and use

p-marc Beach Tennis Tie-Break Scoreboard

A · Clamp for standard posts


Complete assembly: attaching the clamp and fitting the product.

STEP 1




Bring the standard clamp up to the post.

STEP 2

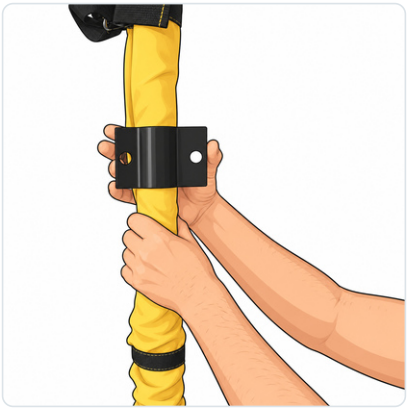

Place it around the post and align the holes.

STEP 3

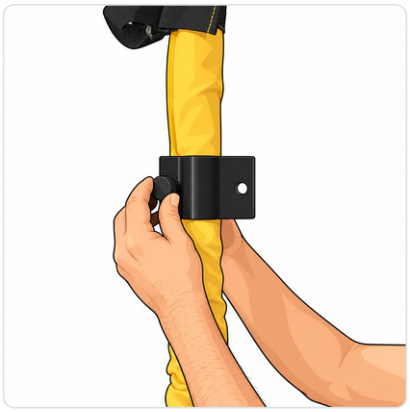


Insert the fixing screw and start turning it.

STEP 4



Tighten the screw.

STEP 5

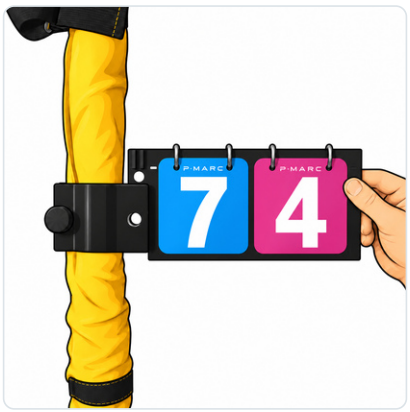

Insert the tie-break scoreboard vertically into the clamp slot.

STEP 6



Slide it until it is fully fitted and properly aligned.

Assembly and use

p-marc Beach Tennis Tie-Break Scoreboard

A · Clamp for standard posts · continued

Complete assembly: attaching the clamp and fitting the product.

STEP 7



For extra support, add the second screw and tighten it.

STEP 8



The tie-break scoreboard is assembled and ready to use.

Assembly and use

p-marc Beach Tennis Tie-Break Scoreboard

B · Clamp for larger posts

Alternative fastening with a hook-and-loop strap only.

STEP 1



Thread the hook-and-loop strap through one clamp handle, with the slot facing upwards.

STEP 2



Fold the strap back onto itself and secure it firmly around the handle you threaded it through.

STEP 3



Place the clamp next to the post and wrap the strap all the way around the post.

STEP 4



Thread the free end through the other handle and pull until the clamp fits snugly around the post.

STEP 5



Fasten the strap. Fit and slide the tie-break scoreboard into the slot. The second screw is only for standard assembly.

Assembly and use

p-marc Beach Tennis Tie-Break Scoreboard

C · FITTING THE REAR SUPPORTS

Fitting the supports from the back of the scoreboard.

STEP 1



Identify the back of the scoreboard, the side without the logo.

STEP 2



Find the small rectangular slots on the right and left.

STEP 3



Identify the two hanger pieces.

STEP 4



Insert each hanger from the back into its rectangular slot until it fits securely.