Assembly and use

p-marc Beach Volleyball / Footvolley Ball Holder

Variant: Footvolley. Block A explains the complete assembly with the clamp for standard posts; B shows the fastening method for larger posts.

If you selected both clamps, use the assembly procedure for the type of post. With the standard clamp, the screw and nut are mandatory.

A · Assembly with the standard clamp

Complete ring assembly and placement of the Footvolley ball.

B · Clamp for larger posts

Attaching the clamp with a strap, without a screw or nut. Ring assembly is explained in block A.

> **IMPORTANT**
>
> Always tighten the screws by hand and do not force them.

Approximate post diameters

The clamp for larger posts is designed for posts approximately 6 to 14 cm in diameter. For larger diameters, contact p-marc: a longer hook-and-loop strap can be adapted to the post.

Assembly and use

p-marc Beach Volleyball / Footvolley Ball Holder

A · Assembly with the standard clamp

Screw and nut are mandatory.

STEP 1




Place the standard clamp on the post.

STEP 2



Press the clamp until it fits securely around the post.

STEP 3

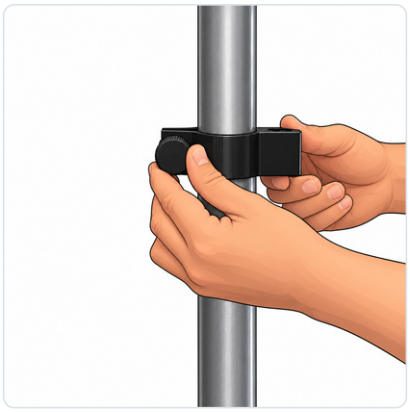

Fit the screw and nut: both are mandatory.

STEP 4



Align the ring connector with the slot in the clamp.

STEP 5



Slide the ring until its connector is fully fitted into the slot.

STEP 6



The holder is assembled and ready to use.

Assembly and use

p-marc Beach Volleyball / Footvolley Ball Holder

A · Assembly with the standard clamp · continued

Screw and nut are mandatory.

STEP 7



Place the Footvolley ball in the holder.

Assembly and use

p-marc Beach Volleyball / Footvolley Ball Holder

B · Clamp for larger posts

Approx. 6-14 cm. No screw or nut. For larger posts, contact p-marc.

STEP 1



Thread the hook-and-loop strap through one clamp handle, with the slot facing upwards.

STEP 2



Fold the strap back onto itself and secure it firmly around the handle you threaded it through.

STEP 3



Place the clamp next to the post and wrap the strap all the way around the post.

STEP 4



Thread the free end through the other handle and pull firmly until the clamp fits snugly around the post.

STEP 5



Fasten the strap onto itself. The clamp is securely attached to the post and ready to use.